Replacement Parts for Pot Filler 11355 SPRAY VALVE REPAIR KIT 1000-3301 11061 2907 POT FILLER 1000-5001 WALL HOOK VALVE 2912-6000 1000-0001 2931 INSULATED 1000-5003 WASHER SWIVEL HOSE BACKFLOW 1000-7502 SCREW HANDLE ADAPTER PREVENTER 2922-5000 2922-5000 WASHER 1000-0003 2932 SWIVEL HOSE 1000-5005 2909-5000 2915-FG ADAPTER O-RING 60" FOODGRADE 2909-3400 WITH VACUUM HOSE BREAKER (<u>a</u> 2912-2501 2912-7501 2909-6000 3200-CV CONTROL VALVE 1000-7502 3000-0011 2000-7500 10464 2000-2301 2000-7500 SEAT SCREW RH SWIVEL SCREW DUCK GASKET LEVER HANDLE SCREW 3000-0000 2000-8000 RH SWIVEL RED BUTTON REPAIR KIT AND 2000-8000 10456 2000-5000 2000-3002 2000-8001 2000-5003 RED BUTTON BIBB CAP LUBE WASHER SEAT WASHER **BLUE BUTTON** 2000-8001 **BLUE BUTTON** 2000-2301 LEVER HANDLE 2000-3002 3967 BIBB CAP 16" SWING SPOUT 2000-0004 10464 3964 RH CHECK STEM 14" SWING SPOUT DUCK GASKET REPAIR KIT 2000-5000 OR 12" SWING SPOUT WASHER 2000-0005 2901-0000 3962 LH CHECK STEM ADD-ON CONTROL 10" SWING SPOUT REPAIR KIT VALVE LESS SPOUT 2000-3406 3961 LH CHECK STEM 8" SWING SPOUT 2000-3407 6" SWING SPOUT RH CHECK STEM 15621 SPOUT NUT (O)(O)2000-6000 0 0 00 2002 **SPRING** SNAP RING 3200-2306 3200-2307 2200-5000 2000-0001 **ECCENTRIC** 1/2" ECCENTRICS 1600-5000 12564 8 **FLANGES GASKETS** SPOUT RETAINER 2.2 GPM O-RINGS ASSEMBLY AFRATOR 10456 1790-1 2200-0000 LUBE 10456 ANGLE STOP NIPPLE KIT WITH CROSS 19119 HANDLE SWIVEL SPOUT 1792 2400-2103 RETRO-FIT KIT FLBOWS MANFACTURING COMPANY PO BOX 60, TULARE, CA 93275 (800)421-6162, FAX: (800)832-8238

www.fisher-mfg.com



8" Adjustable Wall Mount Pot Filler Product Installation Guide

Since 1936, Fisher Manufacturing Company has manufactured heavy-duty, high quality plumbing products and hardware specialties for the food service industry. For three generations, the Fisher family has adhered to a strict dedication of and overall value. When you install Fisher products... you install the best. Our hardware is manufactured with the standardization of internal mechanisms. All chrome plating is triple plated copper, nickel and chrome for durability. Every piece of equipment we make is rigorously tested in both our modern in-house testing center and in actual field situations under extreme conditions. Every detail is thoroughly checked. Before we make our products available to you, they pass each and every test. You get proven performance. Guaranteed.

Limited One Year Warranty

Fisher Manufacturing Company warrants its products and parts thereof (except as noted below) against defects in materials or workmanship for a period of one year after the date of original purchase. During this period Fisher Manufacturing Company will replace a defective product or part without charge to you, provided that the entire product is delivered to Fisher Manufacturing Company. All transportation and insurance charges for shipping the product to and from Fisher Manufacturing Company must be borne by you. Charges for transportation and insurance may, at the option of Fisher Manufacturing Company, be refunded depending upon our investigation of the warranty claim. This warranty does not cover external finish (except at date of original purchase) or labor costs not specifically authorized by Fisher Manufacturing Company.

A full and complete copy of our One Year limited warranty is available upon request.



#2240 - Pot Filler: 8" Adjustable Wall Mount Control Valve with Vacuum Breaker and Wall Hook

#2250 - Pot Filler: 8" Adjustable Wall Mount Control Valve with Swivel Hose Adapter and Wall Hook

KEEP THIS MANUAL FOR FUTURE REFERENCE



REV. A





ANSI/A112.18.1M, ANSI/NSF 61.9

FISHER MANUFACTURING COMPANY - TOLL FREE: 800-421-6162 FAX: 800-832-8238

www.fisher-mfg.com

Installation Instructions for Pot Filler

BE SURE TO CHECK WITH YOUR LOCAL DEPARTMENT HAVING JURISDICTION REGARDING BACKFLOW PREVENTION

Installation Notes:

- · Be sure to shut off water supply before beginning.
- · Use pipe thread sealant such as PST on all threaded joints.
- · Check the packaging for missing items BEFORE beginning installation. If items are missing, contact your supplier.


Tools Required for Installation


- · Medium Sized Crescent Wrench
- · Pipe Thread Sealant
- · Phillips Screwdriver


PST

Installation Instructions

- Insert the gasket into the groove on the eccentric.
 Making sure gasket is in place, loosely mount the eccentric and flange onto the control valve body.
- If no add-on faucet will be installed, proceed to step 3. If installing an add-on faucet, mount the small riser to the control valve body using thread sealant. Thread the add-on faucet to the other end of the small riser, again using thread sealant.
- 3. Mount control valve body to either a wall with male supply nipples, or a backsplash with nipples (not included). Be sure to use pipe thread sealant on the supply nipple threads. Adjust the eccentrics as needed in order to mount the control valve level. Once level, tighten the eccentrics.
- 4. Mount either the swivel hose adapter with vacuum breaker (2932) or swivel hose adapter without vacuum breaker (2931) to control valve body. Use lube on the o-rings on the swivel hose adapter and be sure white snap ring is in place. Tighten nut until swivel hose adapter is secure.
- 5. If installing a backflow preventer, do so by applying thread sealant and inserting into the swivel hose adapter, tightening until secure. Be sure that arrows on backflow preventer are pointing in direction of flow. Using pipe thread sealant, insert the stainless steel hose into either the backflow preventer or the swivel hose adapter and tighten nut until secure.
- 6. Fit one of the handle gaskets inside the outlet of the insulated handle and mount the pot filler valve onto it. Fit the other handle gasket inside the inlet of the insulated handle and mount the handle onto the stainless steel hose. Be sure that gaskets are used on both sides of the insulated handle.

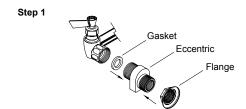

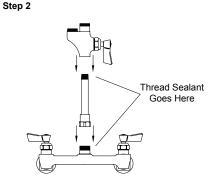

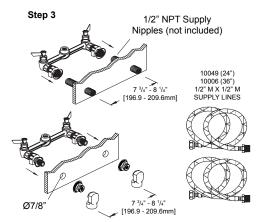


Installation Instructions Continued


- To install the wall bracket, determine a good location and hold firmly against the wall. Using a screwdriver, insert the three screws through the holes in the wall hook and screw into the wall.
- 8. To install swing spout to add-on faucet, apply lube to the o-rings on the swing spout. Make sure the white snap ring is in place before mounting the swing spout. Mount the swing spout and tighten the swing spout nut onto the add-on faucet spout outlet

Step 8

9. Turn on water supply and check for leaks.

Step 7

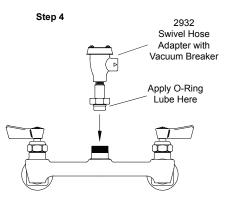

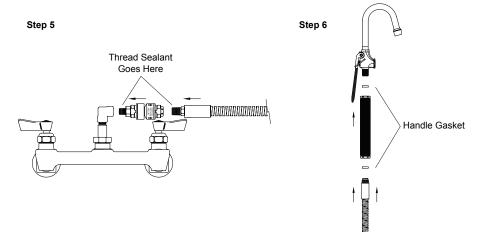

Step 9

