SPEAKMAN COMPANY

SE-201 Installation, Maintenance & Operation Instructions

LIFESAVER® EMERGENCY SHOWER

DESCRIPTION

Emergency deluge shower supplied with self-closing valve, that is activated by a pull chain. Flange can be attached to wall or floor.

SPECIFICATIONS

SHOWER HEAD: 8" Dia. CYCOLAC® Yellow Plastic.

FLOW CONTROL: Internal 20 gpm Regulator.

VALVE: 1" NPT Brass, Chrome-Plated. Self-Closing Valve. ACTIVATOR: #3 Stainless Steel Loop Chain, 102" long.

INLET: 1" NPT Female.

FLANGE: Brass, Chrome Plated. SHIPPING WEIGHT: 6 lb.

EMERGENCY SIGN: 7-7/8" x 7-7/8" Plastic Wall Sign.

OPTIONS

\Diamond	AL1 (Air Horn Alarm)	\Diamond	FLW (Flow Switch)	\Diamond	FPV (Anti-Freeze Protection Valve)
\Diamond	AL2 (Electrical Alarm)	\Diamond	STALL (Shower Stall)	\Diamond	SPV (Anti-Scald Protection Valve)
\Diamond	AL3 (Electrical Alarm)	\Diamond	PC (Polished Chrome Shower Head)	\Diamond	VPL (Vapor Proof Light)
\Diamond	AL2-C1D2 (Electrical Alarm / Haz. Area)	\Diamond	BH (Brass Shower Head)	\Diamond	SGN5 (Shower Floor Sign)
\Diamond	AL3-C1D2 (Electrical Alarm / Haz. Area)	\Diamond	SSH (Stainless Steel Shower Head)	\Diamond	

INSTALLATION

Assemble unit to a 1" supply that has an uninterrupted source of potable water. Use pipe sealant on this joint. Review drawing (as shown on other side) to assure proper installation. Failure to use potable water can result in emergency units producing impure or contaminated water causing possible further injury.

OPERATION

This shower is activated by pulling downward on the pull chain. Once the valve is activated, continuous pressure on the chain is required for a constant flow of water. Valve will automatically shut off when chain is released.

TESTING PROGRAM

The American National Standards Institute (ANSI) states that all safety emergency equipment shall be activated on a weekly basis to flush the line and verify proper operation. Speakman Company furnishes a testing record tag (91-0635) with each unit. On this tag the date of inspection and the inspectors initials should be noted.


MAINTENANCE

Should you need parts to repair this unit, please reference the parts listing below for correct part numbers. Reference additional technical sheets (supplied) for information on the SE-901self-closing valve and the SE-870 shower head. Before any maintenance is done *be sure to shut the water supply off.*

WARNING: Use only genuine Speakman parts when repairing or replacing components. To order parts call 1-800-537-2107.

SE-201 REPLACEMENT/REPAIR PARTS

ITEM	PART/GROUP#	DESCRIPTION
1	SE-901	1" Self-Closing
		Valve
2	05-1328-SS	102" #3 S/S Chain
3	SE-870	8" Plastic Shower
	Head	
4	26-0069-PC-P	Wall/Floor Flange

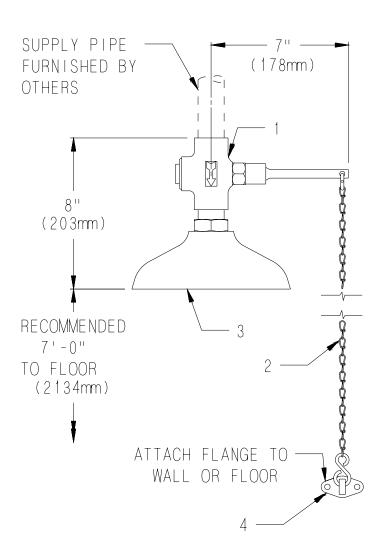

FLOW DATA

SHOWER:

FLOW PRESSURE PSI (BAR)	20 (1.38	60 (4.4)
FLOW RATE GPM (LPM)	20 (75)	25 (94)

NOTE: This unit should be connected to an uninterrupted source of potable water, with a minimum flowing pressure of 20PSI and a maximum static pressure of 80 PSI.

Note: All units meet existing ANSI Z358.1 2004 Standards and OSHA Rules. Product improvements may cause specification and dimensional changes without notice.

SPEAKMAN[®]

PO Box 191 Wilmington, DE 19899 Phone: 800-537-2107 Fax: 800-977-2747 Visit us on the web at www.speakmancompany.com