


Important:
For proper installation, read instruction sheet fully prior to installation.

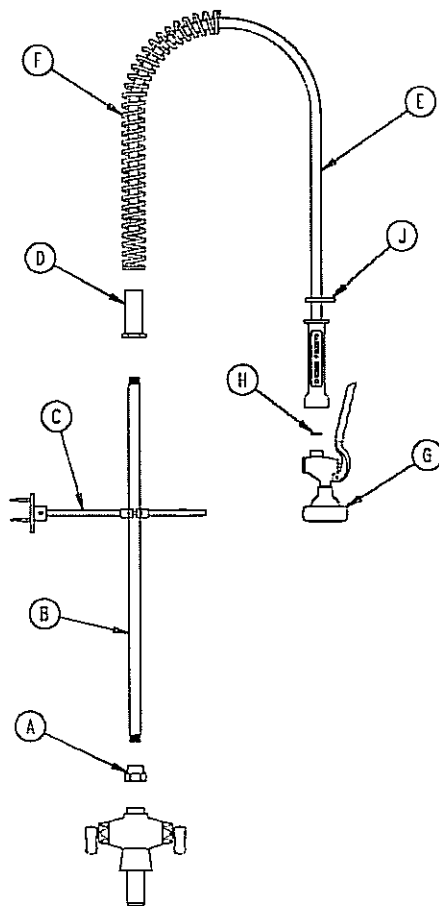

PRE-RINSE FITTINGS

510-GC* (CF9831P105LC)	919* (CF9211P105LC)
919-S*	923* (CF9331P105LC)
920*	923-HC* (CF9337P105LC)

SIMILAR FITTINGS

502*
610*

- Also applies to low flow products.

INSTALLATION INSTRUCTIONS



DO NOT USE CHANNELLOCK PLIERS OR ANY WRENCH WITH TEETH

1. The body adapter (A) and the guide shank (D) are shipped loosely threaded onto the riser (B). Remove adapter and guide shank then apply food grade adhesive, such as permabond number HH040, to both threads in the adapter and securely assemble the body adapter (A) to the body and riser (B). Teflon tape should be used on the pipe threads at the top of the riser and then secure guide shank (D) **WITH HEX SIDE DOWN**, the spring must slide over the guide shank to work properly. (Teflon tape should be applied in accordance with professional plumbing practices). If a back-flow preventor is required the back-flow device, (furnished separately), is installed on the top of the riser first, then the guide shank – *with hex side down* next.
2. Slide spring (F) over hose then wrap threads on hose (E) with Teflon tape and assemble to guide shank and riser assembly tightening securely.
3. Insert green fiber washer (H) into hose handle and assemble spray (G) insuring that spray hold down ring is in place over the handle. The pipe support with integral hose hook (C) to be installed securely after the fitting is assembled.
4. Allow adhesive to cure/dry as recommended by the adhesive manufacturer before allowing water to pass through these areas.