

SERVICE INSTRUCTIONS

...with Illustrated Parts Breakdown

EBCO[®]


**WATER COOLER MODELS:
PLF4FSR, PLF4FSRH,
PLF4FSR-001, PLF4FSRH -001**



SPECIFICATIONS

Voltage	115 VAC \pm 10%/1PH/60 Hertz
Size	40" H., 17" W., 14" D.
Shipping Weight (Approx)	118 LBS.
Cold Water Capacity	4 GPH
Compressor (Front)	1/5 HP
Compressor (Full Load)	3.3 Amps
Compressor (Back)	1/20 HP
Compressor (Full Load)	1.5 Amps
Refrigerant	R-12
Compressor Charge (Front)	5-3/4 OZ.
Compressor Charge (Back)	3-1/2 OZ.


Specifications subject to change without notice.

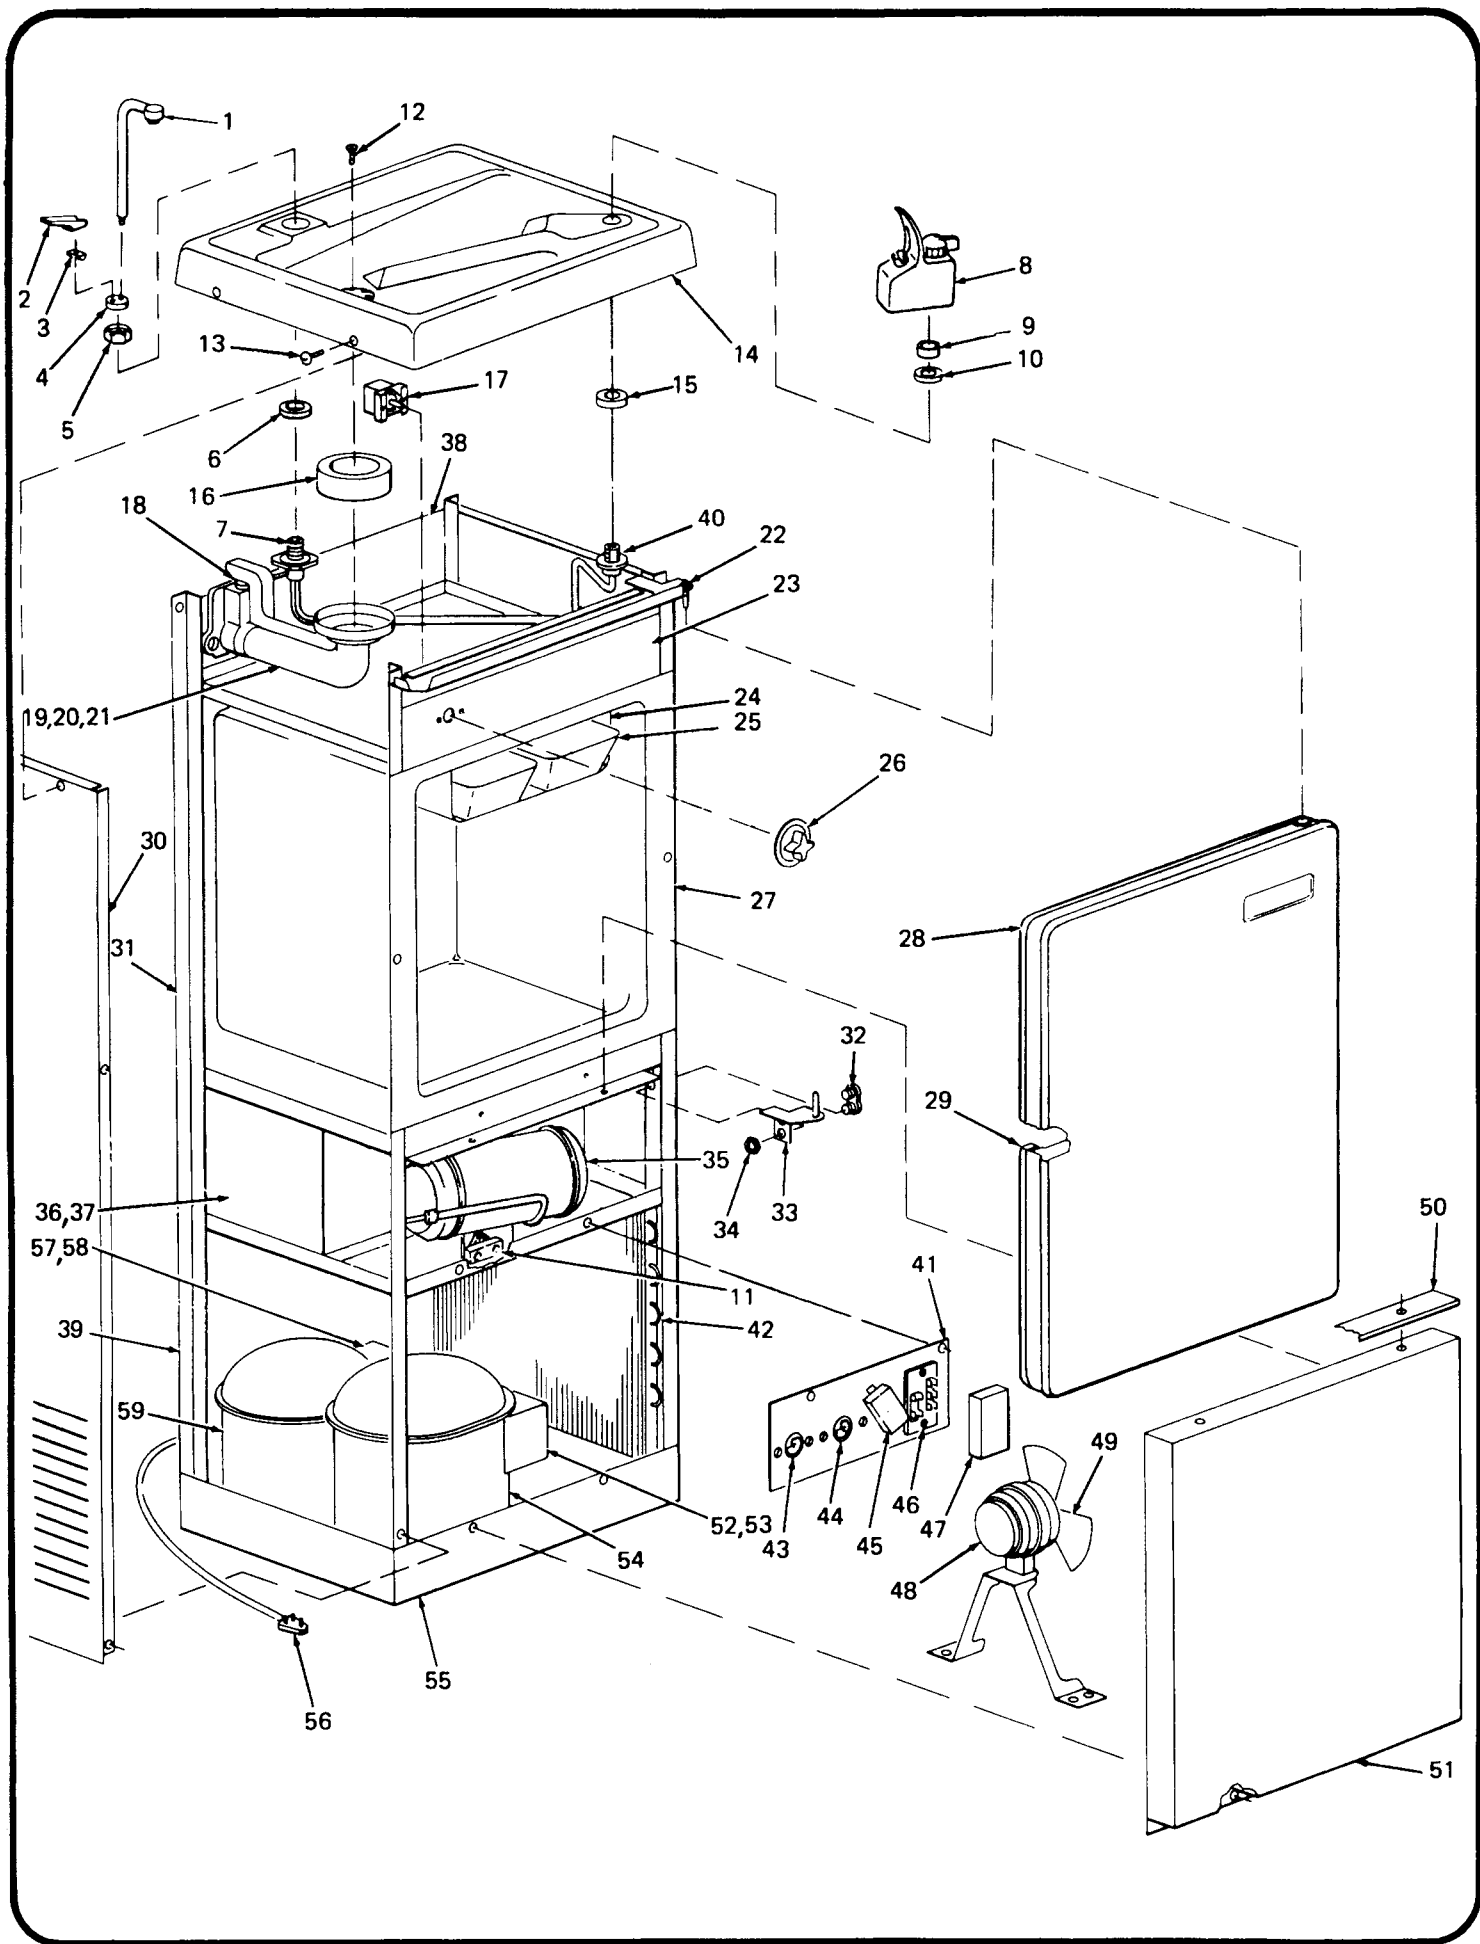


PARTS LIST

ITEM NO.	DESCRIPTION	PLF4FSR PLF4FSR-001	PLF4FSRH PLF4FSRH-001
1	Gooseneck	---	017590
2	Handle	---	017925
3	Tee Nut	---	017926
4	Body Cap	---	017927
5	Nut	---	017583
6	Gasket	---	017582
7	Valve Body and Stem Assembly	---	021189
8	12000A Bubbler Valve	030774-002	030774-002
9	Bubbler Valve Gasket	008983	008983
10	Friction Washer	009281	009281
11	Heat Limiter	---	024373-002
12	Drain Screw	026655-002	026655-002
13	Top Screw	026630-005	026630-005
14	Top	028965-005	028965-002
15	Gasket	028706-001	028706-001
16	Waste Gasket	018050	018050
17	Cold Control Compartment	027040-004	027040-004
18	Check Valve	---	019690
19	Waste Assembly	018692	018692
20	Insulation (LH)	021484	021316
21	Insulation (RH)	021483	021317
22	Upper Hinge Assembly	023460	023460
23	Compartment Trimplate	017357	017357
24	Evaporator	017379	017379
25	Ice Cube Tray	018159-002	018159-002
26	Knob	019838	019838
27	Compartment Liner.....	019803	019803
28	Door	021575	021575
29	Replacement Door Gasket	022535	022535
30	Side Panel - Tan	019403-001	019403-001
31	Leg Support Angle	017404	017404
32	Hinge Retainer	017706	017706
33	Lower Hinge	023459	023459
34	Hex Nut and Lockwasher	026824-007	026824-007
35	Hot Tank Assembly	---	029824-001
36	Insulated Cooling Tank Assembly	029161-001	029162-001
37	Cooling Tank Insulation (2 Required)	017599	017599
38	Upper Back Panel - Tan	017402	017402
39	Lower Back Panel - Tan	017418	017418
40	Bubbler Supply Spud	028701-001	028701-001
41	Relay Bracket	017506	017506
42	Condenser	017666	017666
43	Hot Control	---	027813-001
44	Cold Control	027040-007	027040-007
45	Fan Relay	023616	023616
46	Terminal Base	023265	023265
47	Terminal Cover	019793	019793
48	Fan Motor	027354-010	027354-010
49	Fan Blade	022628	022628
50	Cover	017396-002	017396-002
51	Lower Front Cover - Tan	017412	017412
52	Overload	017290	017290
53	Relay	017245	017245
54	Cold Water Compressor (Includes 52 and 53)	027495-008	027495-008
55	Base Assembly	017435	017435
56	Service Cord	026540-003	026540-003
57	Overload	017571	017571
58	Relay	017573	017573
59	Compartment Compressor (Includes 57 and 58)	017576	017576

ELECTRICAL DIAGRAM

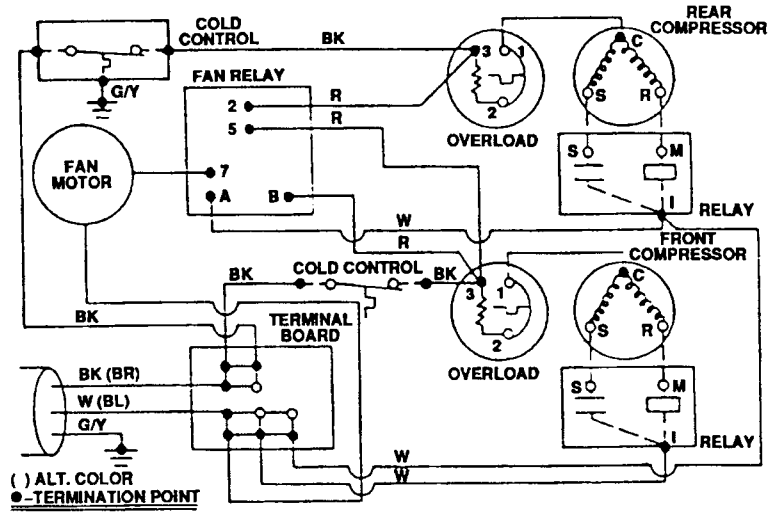

PLF4FSR
PLF4FSR-001

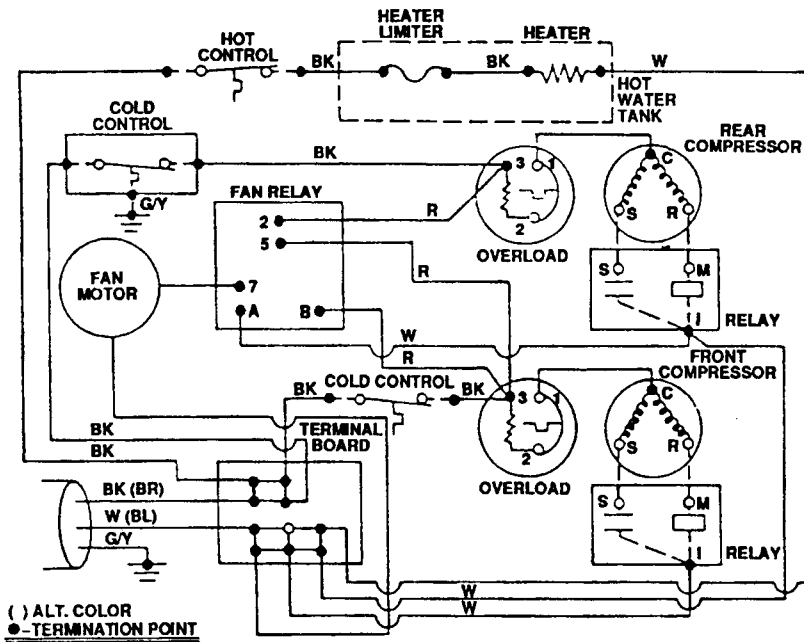

PLF4FSRH
PLF4FSRH-001

EBCO® **MANUFACTURING COMPANY**

265 N. Hamilton Rd. • P.O. Box 13150 • Columbus, OH 43213-0150 • 614/861-1350 • Fax: 614/861-5017