

©2009 Haws Corporation - All Rights Reserved HAWS® and other trademarks used in these materials are the exclusive property of Haws Corporation


THESE DIMENSIONS MAY VARY ±1/2" [6.4mm].

MODEL(S):

WEBSITE WWW HAWSCO COM


080067.D

PROCEDURE FOR LEFT-HAND CONVERSION

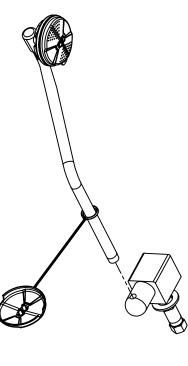


STEP 1:

(SHOWN IN CLOSED POSITION)
REMOVE BEND FROM BODY. HAWS RECOMMENDS
THE USE OF A SOFT TOOTH VICE TO PREVENT
MARKINGS ON CHROME PLATED PARTS
THROUGHOUT ENTIRE PROCEDURE.

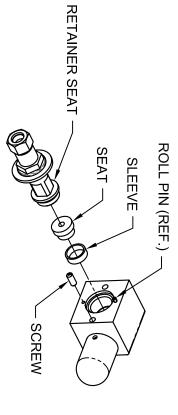


STEP 3:

REMOVE RETAINER SEAT, SLEEVE AND SEAT FROM BODY. REMOVE SCREW.

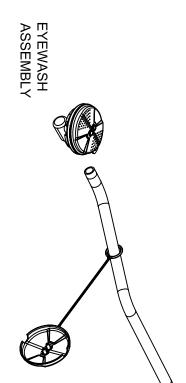

STEP 2:


REMOVE EYEWASH ASSEMBLY FROM BEND.

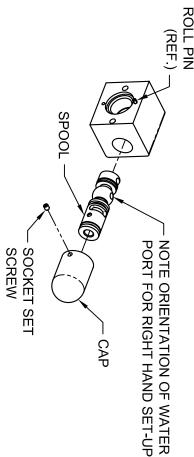

SIEP 4:


LOOSEN AND BACK OFF SOCKET SET SCREW WITH 3/32" HEX WRENCH. REMOVE CAP AND SPOOL. NOTE EXISTING ORIENTATION WATER PORT IN R.H. CLOSED POSITION.



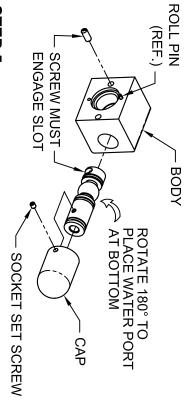

SIEP 5


ROTATE SPOOL 180°, INSERT INTO BODY. INSERT SCREW AT LEFT SIDE OF BODY, SCREW MUST ENGAGE SLOT ON SPOOL. ATTACH CAP, SECURE WITH SOCKET SET SCREW. (THIS IS NOW IN L.H. CLOSED POSITION).

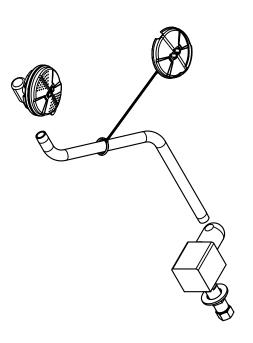

STEP 7:


ATTACH BEND TO BODY, THEN HEAD ASSEMBLY TO BEND, SEE STEP 8 FOR ORIENTATION OF BEND. USE LOCTITE #565 THREAD SEALANT ON MALE THREADS OF BEND (EACH END).

©2009 Haws Corporation - All Rights Reserved

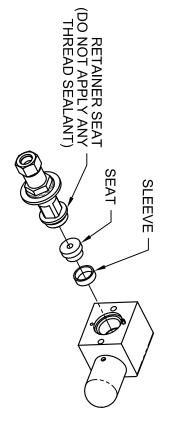

STEP 6:

INSERT SLEEVE, SEAT AND SCREW RETAINER SEAT TIGHTLY.

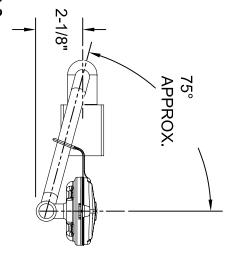

SIEP 8:

NOTE PROPER ORIENTATION OF BEND; 2-1/8" FROM CENTER OF BODY TO CENTER OF EYEWASH TEE. THE 75° IS FOR REFERENCE ONLY.

UPON COMPLETION CHECK FOR PROPER DIRECTION OF ACTIVATION AND FOR LEAKS.



DWG. NO. 12691A00