
Guardian Equipment 1140 N North Branch St Chicago, IL 60642 312 447 8100 TELEPHONE 312 447 8101 FACSIMILE gesafety.com

G3607
THERMOSTATIC MIXING VALVE FOR EYE WASH, HOUSED IN RECESS MOUNTED STAINLESS STEEL CABINET

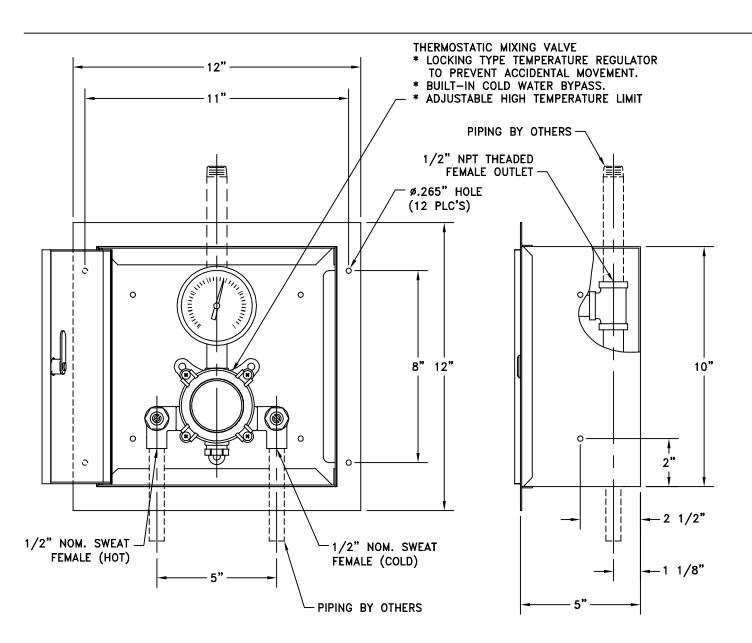

NOTE: ENCLOSURE IS 16 GAUGE BRUSHED STAINLESS STEEL CABINET WITH HINGED DOOR AND KEYED LOCK.

FLOW CAPACITIES	MINIMUM FLOW (GPM)	INTERNAL COLD WATER BY-PASS	SYSTEM PRESSURE DROP									
			5	10	15)	20	25	30	35	40	45	PSI
	L\MIN	MINIMUM	.3	.7	1.0	1.4	1.7	2.1	2.4	2.8	3.1	BAR
	.5	4	2.5	4	5	6	7	8	8.5	9.5	10	GPM
	1.9	15	9.5	15	19	23	27	30	32	36	38	L\MIN

WARNING
IT IS THE RESPONSIBILITY OF THE SPECIFIER TO DETERMINE THE DELIVERED WATER
TEMPERATURE TO EACH SAFETY FIXTURE. A COMFORTABLE RANGE IS 60F TO 90F
1 (15°C TO 32°C). IN CIRCUMSTANCES WHERE A CHEMICAL REACTION IS ACCELERATED
BY WATER TEMPERATURE, A MEDICAL ADVISOR SHOULD BE CONSULTED FOR THE
OPTIMUM TEMPERATURE FOR EACH APPLICATION.

NOTE:

A LIMIT STOP, SET FOR 90°F (32°C), IS SIMPLY A MECHANICAL SETTING TO PREVENT EXCESSIVE HANDLE ROTATION. IF INCOMING WATER IS HOTTER THAN 150°F (66°C), THE TEMPERATURE OF THE FACTORY TEST, THE VALVE WHEN TURNED TO FULL HOT MAY DELIVER WATER IN EXCESS OF 90°F (32°C) AND THE LIMIT STOP MUST BE RESET BY THE INSTALLER!

UNITS (EXCEPT THOSE WITH SELF-CLOSING VALVES) COMPLY WITH THE REQUIREMENTS OF ANSI Z358.1.

TEST ALL EMERGENCY EQUIPMENT AT LEAST WEEKLY.

Drawing Number: G608-070 Approved: Revision Number: 022108-EJM